



# Gel loading


# X-MEN IN WHITE

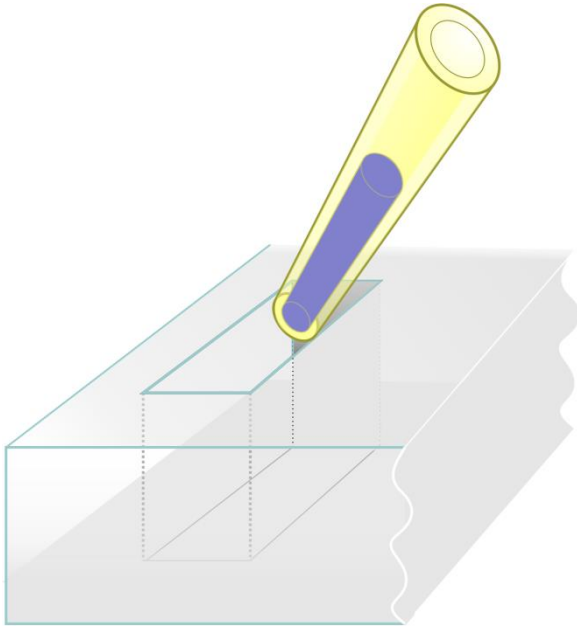

**Hold the tip just inside the well.**  
You might need to steady it with your other hand.

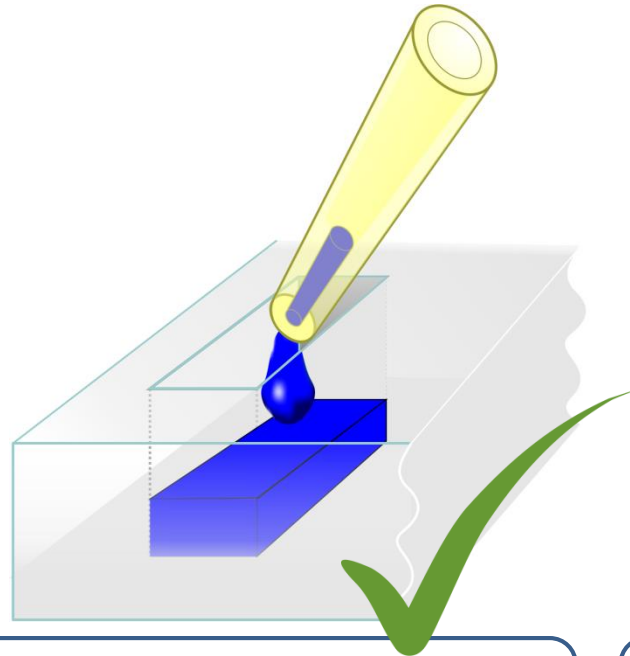

**Slowly press down the plunger.**  
Glycerol in the loading buffer makes the DNA solution denser so it sinks.

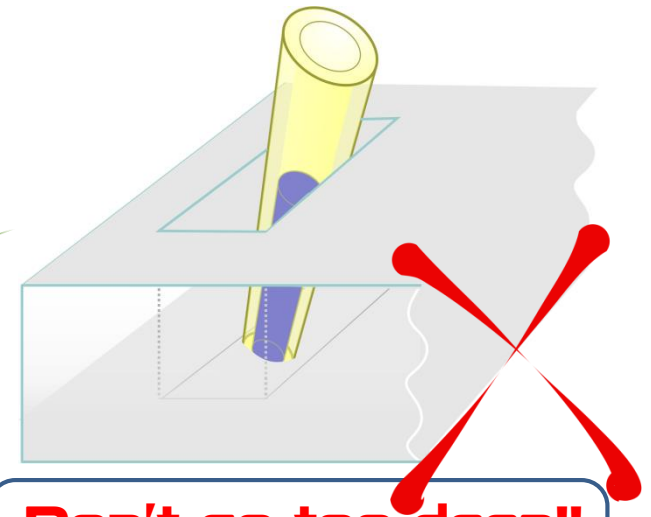

**Don't go too deep!!**  
If you pierce the bottom of the well, the DNA will run out...